 






















 





 




 





 





 

 







 

 

 









Original	Sustituto
 Power	 Power
 [=]/Text	 Text / Goto
 [=?]	 Eject / Surround
 [...]	 Subtitle / EQ
 [=+]	 Pause / Step / Freeze
 [=o]	 Shift + Subtitle / EQ
 [=♦]	 Zoom / Size
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Recall	 Fav / Marker / PC

Original	Sustituto
 0	 0
 Source	 AV / Input / RDS
 ATV	 Shift + D.Menu / Top Menu
 DTV	 D.Menu / Top
 EPG	 Guide / EPG / -/-
 Radio	 TV/Radio /
 I/II/I-II	 Audio / Lang I/II
 Vol+	 Vol+
 PR+	 CH+ / Page+
 P.Info	 Info / Angle
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 PR-	 CH- / Page-
 [i+]	 Display / Media
 [⟷]	 Picture / Format
 Eco	 Sound / Title
 AV Mode	 Smart / List





Original	Sustituto
Menu	Menu / Home
Up	Up
Left	Left
OK	OK
Right	Right
End	Exit / Cancel / Clear
Down	Down
Back	Back / Return
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Sleep	Sleep / Timer
Power Down	Shift + Power
<</Rev	<< / Tune-
Play	Play / Slow
>>/Fwd	>> / Tune+

Original	Sustituto
Option	Setup / OPT /
Rec	Rec / Rec Mode
Rec Stop	Shift + Stop /
Stop	Stop / Hold

