
 

 

 

 

 
 
 

 





 









 
 


 

 



 





















 






Original	Sustituto
 Power	 Power
 Mute	 Mute
 DTV	 Smart
 Radio	 TV/R
 USB	 Options
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide

Original	Sustituto
 Recall	 Back
 Vol +	 Vol +
 Vol -	 Vol -
 P.Mode	 Format
 S.Mode	 Shift + Dual
 FAV	 Pre Ch
 CH +	 Ch +
 CH -	 Ch -
 Menu	 Menu
 Exit	 Exit
 Info	 Info
 Source	 AV
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Original	Sustituto
 Sleep	 Sleep
 Aspect	 3D
 Subtitle	 Subt
 Text	 Text
 Audio	 Dual
 Text Hold	 Shift + Text
 Zoom / Text	 Eject
 Power / Display	 Shift + Power
 Rec / DVD Menu	 Rec
 I<<	 I<<
 >>I	 >>I
 Stop / Eject	 Stop
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Rec List / DVD Setup	 List

Original	Sustituto
 Red / Goto	 Red
 Green / A-B	 Green
 Yellow / Angle	 Yellow
 Blue / Repeat	 Blue

