



Original	Sustituto
Power Tv	Power
Control	Smart / List
[i+]	Info / Angle
P.Info	Shift + Info / Angle
ATV	Shift + Display / Media
DTV	Display / Media
SAT	Shift + 0
Radio	TV/Radio /
Power Ext. Media	Shift + Power
←	Shift + Left
Pause	Pause / Step / Freeze
→	Shift + Right
Rec	Rec / Rec Mode
<<<	<<< / Tune-
Play	Play / Slow
>>>	>>> / Tune+
Rec Stop	Shift + Rec / Rec Mode

Original	Sustituto
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Recall	Fav / Marker / PC
0	0
Source	AV / Input / RDS
AV Mode	Shift + AV / Input / RDS
[<>]	Picture / Format



