





Original	Sustituto
 Power	 Power
 Mute	 Mute
 DTV	 Smart
 Radio	 TV/R
 USB	 3D
 DVD	 Media
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide

Original	Sustituto
 Recall	 Back
 P.Mode	 Shift + Format
 S.Mode	 Shift + Dual
 FAV	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Source	 AV
 Info	 Info
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok





Original	Sustituto
Aspect	Format
Sleep	Sleep
Subtitle	Subt
Audio	Dual
Text	Text
Text/Hold	Options
Text/DVD Zoom	D. Menu
Power/Display	+ Shift + Power
Rec/DVD Menu	Rec
I<<	I<<
>>I	>>I
Stop	Stop
Eject	Eject
<<	<<
>>	>>
Play	Play
Pause	Pause

Original	Sustituto
Rec List/DVD	List
Red/Goto	Red
Green/A-B	Green
Yellow/Angle/3D	Yellow
Blue/Repeat	Blue

