


 

 



 




 


 






 

 
 
 

 

 
 
 

 
 
 
 
 

 
 


 

 

 


 
 
 

 



 
 




Original	Sustituto	Original	Sustituto
 Power Tv	 Power	 ←	 Shift + Left
 NET	 Media	 →	 Shift + Right
 [i+]	 Info	 Pause	 Pause
 FAV	 Shift + Pre Ch	 1	 1
 ATV	 Smart	 2	 2
 DTV	 D. Menu	 3	 3
 SAT	 Shift + Media	 4	 4
 Radio	 TV/R	 5	 5
 Power Source	 Shift + Power	 6	 6
 << Source	 Shift + <<	 7	 7
 Play Source	 Play	 8	 8
 >> Source	 Shift + >>	 9	 9
 USB Rec	 Shift + Rec	 0	 0
 Rec Source	 Rec	 Recall	 Pre Ch
 Rec Stop	 Shift + Stop	 Source	 AV
 Stop Source	 Stop	 I/II/I+II/▼/O	 Dual
 Ready/Time Shift	 Options	 [<>]	 Format





Original	Sustituto
AV Mode	Shift + AV
Eco	Shift + 3D
Vol+	Vol +
Vol-	Vol -
Mute	Mute
P+	Ch +
P-	Ch -
[≡]	Text
3D	3D
End	Exit
EPG	Guide
Back	Back
Menu	Menu
Up	Up
Down	Down
Right	Right
Left	Left

Original	Sustituto
OK	Ok
>>	>>
<<	<<
>>	>>
<<	<<
[...]	Subt
[≡?]	List
[≡o]	Sleep
[≡+]	Eject
Red	Red
Green	Green
Yellow	Yellow
Blue	Blue

