 











 

 
 
 
 



 

 
 
 

 







 
 


 

 
 






 
 

 



 








 
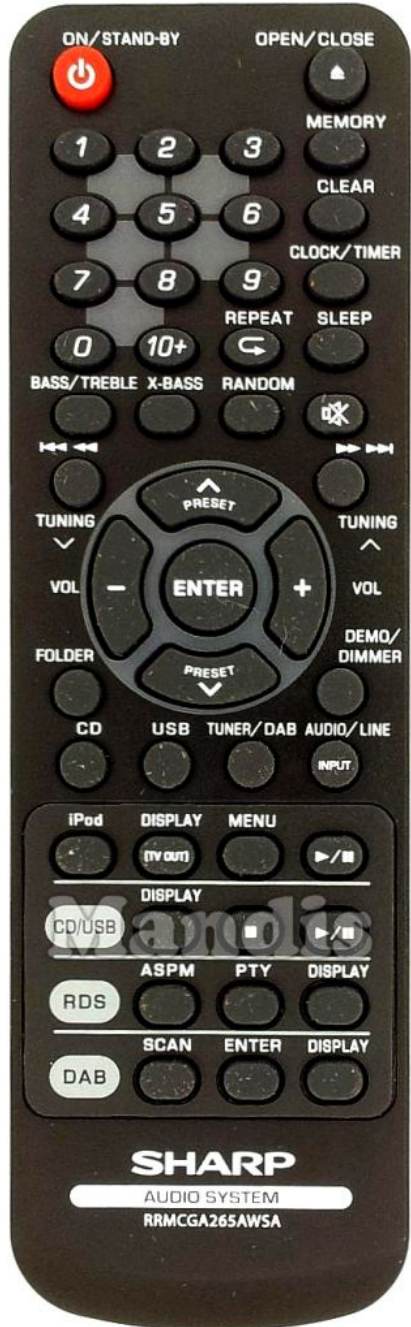 


Original	Sustituto
 On/Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 Guide
 Repeat	 Text
 Open/Close	 Eject
 Memory	 Back
 Clear	 Exit
 Clock/Timer	 Shift + AV

Original	Sustituto
 Sleep	 Sleep
 Bass/Treble	 Dual
 X-Bass	 Subt
 Random	 Media
 I<<</>Tuning	 I<<
 >>>/Tuning	 >>I
 Preset Up	 Up
 Preset Down	 Down
 Enter	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Folder	 Smart
 Demo/Dimmer	 3D
 CD	 Yellow
 USB	 Blue
 Tuner/Dab	 Green





Original	Sustituto
Input/Audio Line	AV
iPod	Red
(Tv Out)/Display	TV/R
Menu	Menu
Play/Pause	Play
Display CD/USB	Info
Stop CD/USB	Stop
Play/Pause	Pause
ASPM RDS	Format
PTY RDS	Pre Ch
Display RDS	Shift + Info
Scan DAB	Left
Enter DAB	Shift + Ok
Display DAB	Right

Original	Sustituto

