












Original	Sustituto
 On / Stand-By	 Power
 Clear / Dimmer	 Yellow
 Memory	 Green
 Disc Select 1	 Shift + 1
 Disc Select 2	 Shift + 2
 Disc Select 3	 Shift + 3
 Disc Select 4	 Shift + 4
 Disc Select 5	 Shift + 5
 CD	 Smart
 Tuner (Band)	 Media
 Video / AUX / USB	 Shift + Smart
 CD Random	 Red
 CD Pause	 TV/R
 USB Pause	 Shift + Pause
 CD Pause	 Pause
 CD Stop	 Format
 CD Stop	 Stop

Original	Sustituto
 CD Play	 Sleep
 CD Play	 Play
 USB Stop	 Shift + Stop
 USB Play	 Shift + Play
 Tuning +	 Shift + Up
 Tuning +	 Up
 Tuning -	 Shift + Down
 Tuning -	 Down
 >>I / >> / Preset Up	 >>
 >>I / >> / Preset Up	 >>I
 >>I / >> / Preset Up	 Right
 I<< / << / Preset Down	 <<
 I<< / << / Preset Down	 I<<
 I<< / << / Preset Down	 Left
 Display	 Info
 Folder	 Ok
 Clock / Timer	 AV





Original	Sustituto
RDS ASPM	SHIFT + 7 Shift + 7
RDS PTY	SHIFT + 8 Shift + 8
RDS Display	SHIFT + 9 Shift + 9
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	GUIDE Guide
Equalizer Mode	SOUND DUAL Dual
X-Bass / Demo	AD SUBT Subt
Volume -	VOL - Vol -

Original	Sustituto
Volume +	+ VOL Vol +

