



Original	Sustituto
Open / Close	Eject / Surround
Operate	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Shift + Guide / EPG / -/--
CH +	CH+ / Page+
CH -	CH- / Page-
C / Erase	Shift + Exit / Cancel / Clear
Direct	Setup / OPT /

Original	Sustituto
i	Info / Angle
Guide	Guide / EPG / -/--
Rec Mode	Shift + Rec / Rec Mode
Input	AV / Input / RDS
Timer On / Off	Sleep / Timer
Time Shift	Text / Goto
HDD	Shift + 7
DVD	Shift + 2
TV / DVD	TV/Radio /
Start Menu	Menu / Home
Up	Up
Rec List / DVD Top Menu	Smart / List
Right	Right
Down	Down
Original / Playlist / DVD Menu	D.Menu / Top
Left	Left
Exit	Exit / Cancel / Clear



