 
 

 





 

 


 

 



 
 


 
 


 

 




 



 

 


 








Original	Sustituto	Original	Sustituto
 Power	 Power	 9	 9
 Input	 AV / Input / RDS	 P+	 CH+ / Page+
 TV/DVD	 TV/Radio /	 [i+]	 Info / Angle
 DTV/ATV	 Smart / List	 0	 0
 EPG	 Guide / EPG / -/-	 Recall	 Fav / Marker / PC
 [<>]	 Picture / Format	 P-	 CH- / Page-
 Mute	 Mute / Dimmer	 Red/I<< Skip	 Red / Netflix / Search
 1	 1	 Green/<< Rev	 Green / APP / Repeat
 2	 2	 Yellow/>>FWD	 Yellow / YouTube / Repeat
 3	 3	 Blue/>>I Skip	 Blue / Prime Video / Random
 Vol+	 Vol+	 Pause	 Pause / Step / Freeze
 4	 4	 Play	 Play / Slow
 5	 5	 Stop	 Stop / Hold
 6	 6	 Setup/Tv Menu	 Setup / OPT /
 Vol-	 Vol-	 DVD Menu	 Menu / Home
 7	 7	 Up	 Up
 8	 8	 Left/<I Slow	 Left





Original	Sustituto
OK	OK
Right/ > Slow	Right
Return	Back / Return
Down	Down
Top Menu	D.Menu / Top
Cancel	Exit / Cancel / Clear
[...]	Subtitle / EQ
[≡♦]/Audio	Audio / Lang I/II
Play Mode	Display / Media
[≡]/Text	Text / Goto
[≡?]/Angle	+ Shift + Info / Angle
[≡o]/Zoom	Zoom / Size
[≡+] Sleep / Timer	

Original	Sustituto

