 



 


 
 











 







 



 







 

















| Original | Sustituto |
|---|--|
|  |  AV / Input / RDS |
|  |  Power |
|  |  1 |
|  |  2 |
|  |  3 |
|  |  4 |
|  |  5 |
|  |  6 |
|  |  7 |
|  |  8 |
|  |  9 |
|  |  Guide / EPG / -/-- |
|  |  0 |
|  |  Back / Return |
|  |  Setup / OPT / |
|  |  Smart / List |
|  |  Fav / Marker / PC |

| Original | Sustituto |
|---|---|
|  |  Info / Angle |
|  |  Vol+ |
|  |  Mute / Dimmer |
|  |  CH+ / Page+ |
|  |  Vol- |
|  |  Picture / Format |
|  |  CH- / Page- |
|  |  Audio / Lang I/II |
|  |  Sound / Title |
|  |  D.Menu / Top |
|  |  Sleep / Timer |
|  |  Up |
|  |  Left |
|  |  OK |
|  |  Right |
|  |  Menu / Home |
|  |  Down |





| Original | Sustituto |
|------------|-----------------------------|
| Exit | Exit / Cancel / Clear |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |
| Teletext | Text / Goto |
| Subtitle | Subtitle / EQ |
| Size | Zoom / Size |
| Subpage | Eject / Surround |
| Index | Display / Media |
| Hold | Shift + Stop / |
| Reveal | TV/Radio / |
| Freeze | Pause / Step / Freeze |
| I<< | I<< / Preset- |
| Stop | Stop / Hold |
| Play/Pause | Play / Slow |
| >>I | >>I / Preset+ |

| Original | Sustituto |
|----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

