



Original	Sustituto
 Power	 Power
 OPC	 Smart
 Sleep	 Sleep
 Select	 Shift + Ok
 [i+]	 Info
 [[<>]]	 Format
 AV Mode	 Shift + AV
 [Mute]	 Options
 [FF]	 Shift + Options
 Card	 Media
 REC Stop	 Rec
 3D-Y/C	 Shift + 3
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5

Original	Sustituto
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 DTV	 TV/R
 [...]	 Subt
 [≡?]	 3D
 [≡i]	 Shift + Info
 [≡]	 Text
 Sound	 Dual
 Mute	 Mute
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -





	Original	Sustituto	Original	Sustituto
	Input	TIMER AV		AV
	DTV Menu	E-MANUAL D.MENU		D. Menu
	Menu	TOP MENU MENU		Menu
	Guide	-/-- GUIDE		Guide
	List	DISC NAV LIST		List
	Up			Up
	Left			Left
	Right			Right
	OK	OK		Ok
	Down			Down
	Exit	CLEAR EXIT		Exit
	Return	RETURN BACK		Back
	Red	A		Red
	Green	B		Green
	Yellow	C		Yellow
	Blue	D		Blue

