









 
 


 

 
 
 

 
 



 






 




Original	Sustituto
 Power Operate	 Power
 Eject	 Eject
 Open/Close	 Mute
 DVD/VCR	 Smart
 Timer Rec	 Red
 Input Select	 AV
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Sustituto
 Return	 Shift + Exit
 Cancel	 Back
 Title Menu/Top	 Menu
 Up	 Up
 CH+	 Ch +
 Down	 Down
 CH-	 Ch -
 TRK+	 Vol +
 Right	 Right
 Left	 Left
 TRK-	 Vol -
 Enter	 Ok
 DVD Menu	 D. Menu
 Setup	 Options
 Stop	 Stop
 Play	 Play
 Pause/Still	 Pause





Original	Sustituto
I<</Skip/Index-	I<<
<</Search-	<<
>>/Search+	>>
>>I/Skip/Index	>>I
One Touch	Blue
CM Skip	Green
I> Slow	Yellow
Rec/OTR	Rec
Rec	SHIFT +  REC MODE Shift + Rec
Dubbing	TEXT Text
Audio/Audio	SOUND DUAL Dual
Zoom	SHIFT +  ZOOM Shift + Eject
A-B Repeat	SHIFT +  AD SUBT Shift + Subt
Zero Return	CLEAR EXIT Exit
Angle Counter	PICTURE FORMAT Format
Subtitle/ATR	AD SUBT Subt
Play Mode Repeat	SHIFT +  SETTINGS OPT Shift + Options

Original	Sustituto
Clock/Counter	SHIFT +  SOUND DUAL Shift + Dual
TV/VCR	SEARCH TV/R TV/R

