




 

 

 




 
 



 

 

 














Original	Sustituto
 On/Off	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv Guide	 Guide
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Picture	 Format

Original	Sustituto
 Sound	 Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 FAV	 Shift + Pre Ch
 Back	 Back
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 TV	 TV/R





Original		Sustituto		Original	Sustituto
	YouTube		Media		
	Netflix		Smart		
	Net+	+	Shift + Media		
	Rec/DVD Menu		Rec		
	I<<		I<<		
	>>I		>>I		
	Stop		Stop		
	<<		<<		
	>>		>>		
	Play		Play		
	Pause		Pause		
	Rec List/DVD		List		
	Red/Goto		Red		
	Green/A-B		Green		
	Yellow/Angle		Yellow		
	Blue/Repeat		Blue		

