

















 








Original	Sustituto
 On/Off	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Tv Guide	 Guide / EPG / -/--
 0	 0
 Recall	 Shift + Back / Return
 Vol+	 Vol+
 Picture	 Picture / Format
 CH+	 CH+ / Page+

Original	Sustituto
 Vol-	 Vol-
 Sound	 Sound / Title
 CH-	 CH- / Page-
 Source	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 FAV	 Fav / Marker / PC
 Info	 Info / Angle
 Text	 Text / Goto
 Subtitle	 Subtitle / EQ
 TV	 TV/Radio / Program





Original	Sustituto
YouTube	Shift + Yellow / YouTube /
Netflix	Shift + Red / Netflix /
Net+	D.Menu / Top
Rec/DVD Menu	Rec / Rec Mode
I<<	I<< / Preset-
>>I	>>I / Preset+
Stop	Stop / Hold
Rec List/DVD	Shift + Rec / Rec Mode
<< PVR/Media	<< / Tune-
PVR/Media >>	>> / Tune+
Play	Play / Slow
Pause	Pause / Step / Freeze
Red/Goto	Red / Netflix / Search
Green/A-B	Green / APP / Repeat
Yellow/Angle	Yellow / YouTube / Repeat
Blue/Repeat	Blue / Prime Video / Random

Original	Sustituto

