

 


 





 











 

 












Original	Sustituto
 On/Off	 Power
 Freeview Play	 Options
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Mute	 Mute
 Tv Guide	 Guide
 Vol+	 Vol +
 Vol-	 Vol -
 Picture	 Format

Original	Sustituto
 Sound	 Dual
 Source	 AV
 CH+	 Ch +
 CH-	 Ch -
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 FAV	 Pre Ch
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Info	 Info
 Text	 Text
 Subtitle	 Subt
 TV	 TV/R





Original	Sustituto
 Netflix	 Media
 You Tube	 Smart
 APPs	 Shift + Media
 Rec/DVD Menu	 Rec
 I <<	 I <<
 >> I	 >> I
 Stop	 Stop
 <<	 <<
 >>	 >>
 Play	 Play
 Pause	 Pause
 Rec List/DVD	 D. Menu
 Red/Goto	 Red
 Green/A-B	 Green
 Yellow/Angle	 Yellow
 Blue/Repeat	 Blue

Original	Sustituto

