


 
 


 



 







 

 

 



 



 










Original	Sustituto
 On/Standby	 Power
 CD	 Yellow
 Tuner/Band	 Green
 Tape	 Red
 <</Tuning	 <<
 >>/Tuning Up	 >>
 I<</Preset	 I<<
 >>I/Preset Up	 >>I
 Play	 Play
 Stop	 Stop
 Pause	 Pause
 Memory	 Smart
 Clear	 Exit
 Random/Repeat	 Text
 Clock	 D. Menu
 Timer	 AV
 Sleep	 Sleep

Original	Sustituto
 Treble-	 Left
 Treble+	 Right
 Bass-	 Down
 Bass+	 Up
 Vol-	 Vol -
 Vol+	 Vol +

