



Original	Sustituto
Open / Close	Eject / Surround
Set Up	Setup / OPT /
Mute	Mute / Dimmer
On / Stand-by	Power
Title	Sound / Title
Subtitle	Subtitle / EQ
Language	Shift + Audio / Lang I/II
Display	Display / Media
DVD	Shift + 2
TUNER	Shift + 6
AUX	Shift + 7
Menu / PBC	Menu / Home
Up	Up
St/Mo	Shift + Sound / Title
Left	Left
Enter	OK
Right	Right

Original	Sustituto
Prog	TV/Radio /
Down	Down
Sleep	Sleep / Timer
Slow / Memory	Shift + Play /
Play / Pause	Play / Slow
Stop	Stop / Hold
<< / Preset-	<< / Tune-
<< / Preset-	Shift + I<< / Preset-
>> / Preset+	>> / Tune+
>> / Preset+	Shift + >>I / Preset+
I<< / Tuning-	I<< / Preset-
I<< / Tuning-	Shift + << /
>>I / Tuning+	Shift + >> /
>>I / Tuning+	>>I / Preset+
Listening	D.Menu / Top
Mode	Smart / List
Adj/Vol-	Vol-





Original	Sustituto
Adj/Vol+	Vol+
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
>10	Guide / EPG / -/--
Step	Pause / Step / Freeze
Direct	AV / Input / RDS
Return	Back / Return
Repeat	Green / APP / Repeat
A-B	Yellow / YouTube / Repeat

Original	Sustituto
Angle	Info / Angle
Zoom	Zoom / Size
Audio	Audio / Lang I/II
NTSC/PAL	Picture / Format

