



































Original	Sustituto	Original	Sustituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Mode	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Info	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	Pro Logic	 OK
Title	 Sound / Title	Menu Right	 Right
Lang	 Audio / Lang I/II	Clear/00:00	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
NTSC/PAL	 Picture / Format	Key+	 Vol+
Zoom	 Zoom / Size	Auto/Track	 Smart / List
Timer	 Sleep / Timer	Slow Up	 CH+ / Page+



Original	Sustituto	Original	Sustituto
Key-	Vol-	Effect	Yellow / YouTube / Repeat
Display	Display / Media	Random	Blue / Prime Video / Random
Store	CH- / Page-	Dimmer	Shift + Mute / Dimmer
1	1	Play/Back	Shift + Play /
2	2	5.1Ch	Shift + Sound / Title
3	3	2.1Ch	Shift + Audio / Lang I/II
4	4	EQ	Shift + Subtitle / EQ
5	5	Game	Shift + Smart / List
6	6	Shuffle	Shift + Blue / Prime
7	7		
8	8		
9	9		
+10	Guide / EPG / -/--		
0	0		
Mark	Fav / Marker / PC		
Search	Red / Netflix / Search		
Erase	Green / APP / Repeat		

