



 







 


 
 

 

 




 






Original	Sustituto
 Power On	 Power
 Standby	 Shift + Power
 Input	 AV
 Mute	 Mute
 Vol Up	 Shift + Right
 Vol Down	 Shift + Left
 Volume+	 Vol +
 Volume-	 Vol -
 T/V/CH Level	 Smart
 CH/Album Up	 Ch +
 CH/Album Down	 Ch -
 Up	 Up
 Down/Search	 Down
 Sel >	 Right
 < Sel	 Left
 Enter	 Ok
 Play	 Play

Original	Sustituto
 Stop	 Stop
 </Pause	 Pause
 >> /Preset+	 >>
  <</Preset-	  <<
 >>/Tune+	 >>
 <</Tune-	 <<
 Setup/Home	 Media
 Test/Disc Menu	 Menu
 Dimmer/Return	 Back
 Display	 Info
 RDM/Room2	 Exit
 Audio	 Options
 Surround/Play List >	 Green
 < Surround/Play List	 Red
 Stereo/Play M	 TV/R
 1 / Tuner	 1
 2 / CD	 2






 





 

 

 









 









 



 









 
 
 
 




 




	Original	Sustituto	
F.AUX <b>3</b>	3 / F.Aux	<b>3</b>	3
TAPE <b>4</b>	4 / Tape	<b>4</b>	4
BT IN <b>5</b>	5 / BT In	<b>5</b>	5
VIDEO 1 <b>6</b>	6 / Video 1	<b>6</b>	6
VIDEO 2 <b>7</b>	7 / Video 2	<b>7</b>	7
VIDEO 3 <b>8</b>	8 / Video 3	<b>8</b>	8
<b>9</b>	9	<b>9</b>	9
<b>0</b>	0	<b>0</b>	0
<b>+10</b>	10	<b>-/--</b> GUIDE	Guide
EXT.IN <b>D</b>	Ext In	<b>D</b>	Blue
SLEEP <b>D</b>	Sleep	<b>PROG</b> SLEEP	Sleep
AVR <b>1</b>	AVR	<b>SHIFT</b> + <b>1</b>	Shift + 1
RECALL DOCK <b>2</b>	Dock	<b>SHIFT</b> + <b>2</b>	Shift + 2
SELECT CD <b>3</b>	CD	<b>SHIFT</b> + <b>3</b>	Shift + 3
AUX <b>4</b>	AUX	<b>SHIFT</b> + <b>4</b>	Shift + 4
BD <b>5</b>	BD	<b>SHIFT</b> + <b>5</b>	Shift + 5
TV <b>6</b>	TV	<b>SHIFT</b> + <b>6</b>	Shift + 6

	Original	Sustituto
<b>SAT</b>	SAT	<b>SHIFT</b> + <b>7</b> Shift + 7
<b>CBL</b>	CBL	<b>SHIFT</b> + <b>8</b> Shift + 8





Original	Sustituto	Original	Sustituto
 Power On	 Power	 Audio	 Dual
 Standby	 Shift + Power	 Subtitle	 Subt
 Up	 Up	 1	 1
 Down	 Down	 2	 2
 Right	 Right	 3	 3
 Left	 Left	 4	 4
 Enter	 Ok	 5	 5
 Setup/Home	 Media	 6	 6
 Test/Disc Menu	 Menu	 7	 7
 Play	 Play	 8	 8
 Stop	 Stop	 9	 9
 >>	 >>	 0	 0
 <<	 <<		
 I<<	 I<<		
 >>I	 >>I		
 Display	 Info		
 Dimmer/Return	 Back		





	Original	Sustituto	Original	Sustituto
	CD			Power
	Play			Play
	Stop			Stop
	Pause			Pause
	I<<			I<<
	>>I			>>I
	1			1
	2			2
	3			3
	4			4
	5			5
	6			6
	7			7
	8			8
	9			9
	0			0





Original		Sustituto		Original		Sustituto	
	Power On		Power		Audio		Options
	Standby	+	Shift + Power		< Surround/Play List		Red
	RDM/Room2		Exit		Surround/Play List >		Green
	CH/Album Up		Ch +		Stereo/Play M		TV/R
	CH/Album Down		Ch -		Sleep / Dock M.		Sleep
	Play		Play				
	Pause		Pause				
	Stop		Stop				
	>>		>>				
	<<		<<				
	I<<		I<<				
	>>I		>>I				
	Test/Disc Menu		Menu				
	Display		Info				
	Enter		Ok				
	Up		Up				
	Down		Down				

