 





 
 
 

 



 

 
 
 
 
 

 
 
 

 












 
 
 

 

 
 
 
 
 
 

 

 
 

 














Original	Sustituto	Original	Sustituto
	Power		Power
	Source		AV
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TV		TV/R
	Recall		Pre Ch
	Vol+		Vol +
	Vol-		Vol -
	Mute		Mute
	P+		Ch +
	P-		Ch -
	i		Info
	Menu		Menu
	Q.Menu		D. Menu
	Back		Back
	Exit		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	World		Media
	Music/Camera/Ph		Smart
	Guide		Guide
	*/O		Format
	*/Q		3D





Original	Sustituto	Original	Sustituto
[≡]/Text	Text		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Lang	Dual		
[≡]..	Subt		
-[O]-	Options		
<<	<<		
Pause	Pause		
>>	>>		
Rec	Rec		
Play	Play		
Stop	Stop		

