




Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Right	 Right
 Down / P-	 Down
 Down / P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Original	Sustituto
 --	 Guide / EPG / -/--
 0	 0
 P < P	 Fav / Marker / PC
 PP	 Back / Return
 Vol+	 Vol+
 I-II	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Info	 Info / Angle
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 [TV]	 Shift + 1
 [TV]	 TV/Radio /
 [AV]	 AV / Input / RDS
 [≡]	 Text / Goto





 





 

 
 



 
 

 

 















Original	Sustituto
[≡⊕]	Subtitle / EQ
[/≡]	Picture / Format
[≡X]	Exit / Cancel / Clear
[≡↓]	Zoom / Size
[≡?]	Display / Media
[≡i]	Smart / List

Original	Sustituto





Original	Sustituto
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Select	 OK
 Right	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Sustituto
 9	 9
 +10	 Guide / EPG / -/-
 0	 0
 Repeat	 Green / APP / Repeat
 Search	 Red / Netflix / Search
 A→B	 Yellow / YouTube / Repeat
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 C	 Blue / Prime Video / Random
 Angle	 Info / Angle
 Return	 Back / Return
 Time	 Sleep / Timer
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+





































 


































Original	Sustituto	Original	Sustituto
	I<< / Preset-		
	>>I / Preset+		
	Play / Slow		
	Pause / Step / Freeze		
	Stop / Hold		
	Sound / Title		
	Eject / Surround		







 

 



Original	Sustituto	Original	Sustituto
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Original	Sustituto	Original	Sustituto
Menu Right	 Right	Menu Down	 Down
Menu Down	 Down	Back	 Back / Return
Back	 Back / Return	Volume+	 Vol+
Volume+	 Vol+	Chan.Up	 CH+ / Page+
Chan.Up	 CH+ / Page+	Volume-	 Vol-
Volume-	 Vol-	Display	 Display / Media
Display	 Display / Media	Chan.Down	 CH- / Page-
Chan.Down	 CH- / Page-	1	 1
1	 1	2	 2
2	 2	3	 3
3	 3	4	 4
4	 4	5	 5
5	 5	6	 6
6	 6	7	 7
7	 7	8	 8
8	 8	9	 9
9	 9		





Original	Sustituto
Guide -/-- 1.	 Guide / EPG / -/--
0/10	 0
2.Fav P/C 2.	 Fav / Marker / PC
Red	 Red / Netflix / Search
Green	 Green / APP / Repeat
Yellow	 Yellow / YouTube / Repeat
Blue	 Blue / Prime Video / Random
Lang	 Shift + Audio / Lang I/II

Original	Sustituto

