

 

 

 

 

 

 



 

 





 

 

 

 









 

 


 


 

 

 





 












 

 







 

 

 



 

 







 



Original	Sustituto	Original	Sustituto
	Power		Power
	PC Auto/Eject		Smart / List
	FAV		Fav / Marker / PC
	FAV-		Shift + CH- /
	FAV+		Shift + CH+ /
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Shift + Guide / EPG / -/--
	0		0
	Back		Back / Return
	Display		Display / Media
	Input		AV / Input / RDS
	Aspect		Shift + Picture / Format
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Menu		Menu / Home
	Mute		Mute / Dimmer
	Exit/DVD Setup		Exit / Cancel / Clear
	Vol+		Vol+
	Lang/Audio		Audio / Lang I/II
	CH+		CH+ / Page+





Original	Sustituto
 Vol-	 Vol-
 CH-	 CH- / Page-
 Angle/Text	 Text / Goto
 Zoom/Hold	 Zoom / Size
 D.Menu/Tv/Radi	 TV/Radio /
 Title/EPG	 Guide / EPG / -/--
 D.Disp/Index	 D.Menu / Top
 Play/Size	 Play / Slow
 Pause/Size	 Pause / Step / Freeze
 <</Reveal	 << / Tune-
 >>	 >> / Tune+
 Subtitle/Subpage	 Subtitle / EQ
 Goto	 Shift + Text /
 Stop	 Stop / Hold
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Red/Program	 Red / Netflix / Search

Original	Sustituto
 Green/Intro	 Green / APP / Repeat
 Yellow/Repeat	 Yellow / YouTube / Repeat
 Blue/A-B	 Blue / Prime Video / Random

