













 










 


 



 

 









 

 

 

 

 

 

 

 



 







Original	Sustituto
	 Info / Angle
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Text / Goto
	 0
	 Back / Return
	 Display / Media
	 Shift + Yellow / YouTube /
	 Picture / Format

Original	Sustituto
	 Shift + Picture / Format
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Guide / EPG / -/--
	 Up
	 AV / Input / RDS
	 Left
	 OK
	 Right
	 Shift + Back / Return
	 Down
	 Setup / OPT /
	 Menu / Home
	 I << / Preset-
	 Shift + << / Tune-



 

 

 




 


 

 


 








Original	Sustituto
→	Shift + >> /
>>	>>  / Preset+
<< < <<	<< / Tune-
Play	Play / Slow
>> >  >	>> / Tune+
Theatre	Smart / List
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Mute	Mute / Dimmer
Vol+	Vol+
Prog+	CH+ / Page+
Vol-	Vol-
Prog-	CH- / Page-
Rec	Rec / Rec Mode
Rec Pause	Shift + Pause / Step /
Rec Stop	Shift + Stop /

Original	Sustituto



 



 

 

 

 
 
 



 

 

 

 

 

 

 






 
 



 





 

 



 





 





 





Original	Sustituto
	 Info / Angle
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 0
	 Back / Return
	 Yellow / YouTube / Repeat
	 Up
	 Left
	 OK

Original	Sustituto
	 Right
	 Shift + Back / Return
	 Down
	 I<< / Preset-
	 Shift + << /
	 Shift + >> /
	 >>  / Preset+
	 << / Tune-
	 Play / Slow
	 >> / Tune+
	 Pause / Step / Freeze
	 Stop / Hold
	 D.Menu / Top
	 Menu / Home

 

 

 

 





Original	Sustituto	Original	Sustituto
 [i+]/[?]	 ANGLE INFO Info / Angle	 Green	 APP Green / APP / Repeat
 Power	 Power	 Yellow	 YouTube Yellow / YouTube / Repeat
 1	 TV 1 1	 Blue	 Prime Video Blue / Prime Video / Random
 2	 DVD 2 2	 Up	 Up
 3	 CD - STB 3 3	 Left	 Left
 4	 VIDEO 4 4	 OK	 OK
 5	 TAPE 5 5	 Right	 Right
 6	 TUNER 6 6	 Return	 BACK Back / Return
 7	 AUX - HDD 7 7	 Down	 Down
 8	 USB 8 8	 Tools	 OPT-TOOLS Setup / OPT /
 9	 BLUETOOTH 9 9	 Menu	 HOME MENU Menu / Home
 [=]	 GOTO TEXT Text / Goto	 I<<	 PRESET- I<< / Preset-
 0	 HDMI - SAT 0 0	 >>I	 PRESET+ >>I / Preset+
 Digital/Analog	 MEDIA DISPLAY Display / Media	 <II/<I/<<	 TUNE- << / Tune-
 [+]	 SHIFT + HOLD Shift + Stop /	 Play	 SLOW Play / Slow
 [><]	 FORMAT PICTURE Picture / Format	 >>I/>II>	 TUNE+ >> / Tune+
 Red	 NETFLIX SEARCH Red / Netflix / Search	 Theatre	 LIST SMART Smart / List



 















 





 



 

 

 

 



Original	Sustituto
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Top Menu	 Shift + D.Menu / Top Menu
 Menu BD/DVD	 D.Menu / Top

Original	Sustituto





Original	Sustituto
 [i+]/[?]	 Info / Angle
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Back / Return
 A/B	 Yellow / YouTube / Repeat
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left

Original	Sustituto
 OK	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Menu	 Menu / Home
 I<<	 I<< / Preset-
 ←	 Shift + << /
 →	 Shift + >> /
 >>I	 >>I / Preset+
 <II/<I<<	 << / Tune-
 Play	 Play / Slow
 >>I/>II>	 >> / Tune+
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Mute	 Mute / Dimmer
 Vol+	 Vol+
 Vol-	 Vol-





Original	Sustituto	
Top Menu	+   Shift + D.Menu / Top Menu	
Menu BD/DVD	D.Menu / Top	

Original	Sustituto

