 


 



 



 
 
 
 

 
 

 
 
 
 
 

 
 
 
 
 
 
 

 


 



Original	Sustituto
 Power	 Power
 Power Tv	 Shift + Power
 Input Tv	 AV
 Open/Close	 Eject
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Subtitle	 Subt
 Vol+	 Vol +

Original	Sustituto
 Vol-	 Vol -
 ♥	 Pre Ch
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Top Menu	 Shift + Menu
 Pop Up/Menu	 Menu
 Return	 Back
 Options	 Options
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Home	 Smart
 I<<	 I<<





	Original	Sustituto	Original	Sustituto
	>>I		>>I	
	Pause		Pause	
	<<		<<	
	>>		>>	
	Play		Play	
	Stop		Stop	
	Display		Info	
	SEN		TV/R	

