






 

 

 


 
 

 

 

 
 
 



 


 
 

 



 
 



 
 



 

 
 


 
 



 


 


 
 
 

 




Original	Sustituto	Original	Sustituto
 Power	 Power	 ♥	 Pre Ch
 Power Tv	 Shift + Power	 Theatre	 Media
 Input Tv	 AV	 Top Menu	 Menu
 Vol+	 Vol +	 Pop Up Menu	 Guide
 Vol-	 Vol -	 Return	 Back
 1	 1	 Options	 Options
 2	 2	 Eject	 Eject
 3	 3	 Home	 Smart
 4	 4	 OK	 Ok
 5	 5	 Up	 Up
 6	 6	 Down	 Down
 7	 7	 Right	 Right
 8	 8	 Left	 Left
 9	 9	 Play	 Play
 0	 0	 Pause	 Pause
 Audio	 Dual	 Stop	 Stop
 Subtitle	 Subt	 Display	 Info





Original	Sustituto
 >>	 >>
 <<	 <<
 I<<	 I<<
 >>I	 >>I
 →	 Ch +
 ←	 Ch -
 Red	 A Red
 Green	 B Green
 Yellow	 C Yellow
 Blue	 D Blue

Original	Sustituto

