



Original	Sustituto	Original	Sustituto
	Power		Power
	Audio Monitor		Audio / Lang I/II
	Wide		Picture / Format
	Tv/Video		TV/Radio /
	[≡]		Text / Goto
	Tv/Video		AV / Input / RDS
	Vol+		Vol+
	[]		Info / Angle
	Prog+		CH+ / Page+
	Vol-		Vol-
	Display		Display / Media
	Prog-		CH- / Page-
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	-/--		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random





Original	Sustituto
Eject	Eject / Surround
Power	Power
Audio Monitor	Audio / Lang I/II
Wide	Picture / Format
Counter Remain	Yellow / YouTube / Repeat
[I]	Info / Angle
I> Slow	Shift + Play /
X2	Shift + >> /
I<< Index Search	I<< / Preset-
Index Search >>I	>>I / Preset+
Display	Display / Media
SP/LP	Green / APP / Repeat
Clear	Exit / Cancel / Clear
Tv/Video	TV/Radio /
1	1
2	2
3	3

Original	Sustituto
4	4
5	5
6	6
7	7
8	8
9	9
-/--	Guide / EPG / -/--
0	0
Input Select	AV / Input / RDS
Vol+	Vol+
Prog+	CH+ / Page+
Vol-	Vol-
Prog-	CH- / Page-
Rec	Rec / Rec Mode
Pause	Pause / Step / Freeze
Up	Up
Timer	Sleep / Timer





Original	Sustituto	Original	Sustituto
	Menu		Menu / Home
	Smart Search		Smart / List
	Smart Search		Red / Netflix / Search
	<<		<< / Tune-
	Left		Left
	Play		Play / Slow
	OK		OK
	>>		>> / Tune+
	Right		Right
	Stop		Stop / Hold
	Down		Down

