



 
 


 


 


 


 

 
 
 
 


 
 
 
 
 
 
 
 












Original	Sustituto	Original	Sustituto
 Power	 Power	 I<<	 I<<
 Sleep	 Sleep	 Folder +	 Smart
 Display	 Info	 Folder -	 Media
 Play Mode / Tuning Mode	 Shift + Play	 Play	 Play
 Repeat / FM Mode	 Text	 >>	 >>
 Clear	 Exit	 <<	 <<
 EQ	 Dual	 Pause	 Pause
 Tuner Memory	 Eject	 Stop	 Stop
 Timer Menu	 AV	 Volume +	 Vol +
 Up	 Up	 Volume -	 Vol -
 Down	 Down	 Function +	 Ch +
 Right	 Right	 Function -	 Ch -
 Left	 Left		
 OK	 Ok		
 Return	 Back		
 Tool Menu	 Menu		
 >>I	 >>I		

