








 



 

 



 





 


 
 

 






Original	Sustituto
 Power	 Power
 TV Power	 Shift + Power
 TV Input	 AV
 Open / Close	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Audio	 Dual
 Subtitle	 Subt
 Vol+	 Vol +

Original	Sustituto
 Vol-	 Vol -
 FAV	 Pre Ch
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Top Menu	 Shift + Menu
 Top Menu	 D. Menu
 Pop Up / Menu	 Menu
 Up	 Up
 Left	 Left
 OK	 Ok
 Right	 Right
 Down	 Down
 Return	 Back
 Options	 Options
 Home	 Smart



