



	Original	Sustituto		Original	Sustituto
	Power		Power		D Zoom- / Stop
	Input		Source		Vol + / Page +
	APA		Mode		Vol - / Page -
	Eco Mode		Eco / Aspect		Freeze / Timer
	Menu		Menu		Blank / Mute
	Reset		Shift + Power		Shift + Mute / Blank / Mute
	Up		Up		
	Left		Left		
	Enter		Enter		
	Right		Right		
	Down		Down		
	Return		Auto		
	Aspect		Shift + Eco / Aspect		
	Keystone		Shift + Down		
	Keystone		Shift + Up		
	Pattern		Comp / Video		
	D Zoom+		+ / Play		

