



Original	Sustituto
Power	Power
SET	Fav / Marker / PC
Wide	Zoom / Size
Hi-Speed REW	Shift + << /
Counter Remain	Red / Netflix / Search
TV/Video	TV/Radio /
Eject	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0

Original	Sustituto
-/--	Guide / EPG / -/--
Prog+	CH+ / Page+
Prog-	CH- / Page-
Vol+	Vol+
Vol-	Vol-
Play	Play / Slow
Stop	Stop / Hold
Pause	Pause / Step / Freeze
FF	>> / Tune+
Index Search >>I	>>I / Preset+
I<< Index Search	I<< / Preset-
REW	<< / Tune-
Skip	Exit / Cancel / Clear
Wheel >	Shift + >>I / Preset+
Up	Up
< Wheel	Shift + I<< / Preset-
Down	Down









Original	Sustituto
Power	Power
Wide	Zoom / Size
Display	Display / Media
TV/Video	TV/Radio /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
-/--	Guide / EPG / -/--
Vol+	Vol+
Vol-	Vol-

Original	Sustituto
Prog+	CH+ / Page+
Prog-	CH- / Page-
Audio Monitor	Audio / Lang I/II
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
[≡]	Text / Goto
Smart	Smart / List

