



Original	Sustituto
Continue Play	Text / Goto
Shuffle Play Mode	AV / Input / RDS
Program Play	Setup / OPT /
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
>10	Guide / EPG / -/--
10	0
Clear	Exit / Cancel / Clear
Disc1	Shift + 1
Disc2	Shift + 2

Original	Sustituto
Disc3	Shift + 3
Disc4	Shift + 4
Disc5	Shift + 5
Disc Skip	Fav / Marker / PC
Play	Play / Slow
Pause	Pause / Step / Freeze
Stop	Stop / Hold
I<<< AMS	I<<< / Preset-
AMS >>>	>>> / Preset+
Line Out Level+	Vol+
<<<	<<< / Tune-
>>>	>>> / Tune+
Line Out Level-	Vol-

