

 

 

 



 



Original	Sustituto
	Power
	Web
	Red
	Green
	Media
	Setting
	Yellow
	APP
	Blue
	Return
	Home
	Recent
	Up
	Down
	Left
	Right
	OK
	Power
	Smart / List
	Red / Netflix / Search
	Green / APP / Repeat
	Display / Media
	Setup / OPT /
	Yellow / YouTube / Repeat
	Shift + Green / APP /
	Blue / Prime Video / Random
	Shift + Back / Return
	Shift + Menu /
	Back / Return
	Up
	Down
	Left
	Right
	OK

Original	Sustituto
	Menu
	↖/Mouse
	I<<
	Play
	Pause
	Stop
	>>I
	Vol-
	Mute
	Vol+
	1
	2
	3
	4
	5
	6
	7
	Menu / Home
	Info / Angle
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	Stop / Hold
	>>I / Preset+
	Vol-
	Mute / Dimmer
	Vol+
	1
	2
	3
	4
	5
	6
	7





	Original	Sustituto		Original	Sustituto
	8	 8			
	9	 9			
	0	 0			
	—	 Guide / EPG / -/--			
	<X]	 Fav / Marker / PC			

