










 














 





Original	Sustituto
Power	Power
Open / Close	Eject / Surround
OSD	Display / Media
1	1
2	2
3	3
Subtitle	Subtitle / EQ
4	4
5	5
6	6
Angle	Info / Angle
7	7
8	8
9	9
Language	Audio / Lang I/II
R/L	Blue / Prime Video / Random
0	0

Original	Sustituto
10+	Guide / EPG / -/--
Setup	Setup / OPT /
Mute	Mute / Dimmer
Clear	Exit / Cancel / Clear
Prog	TV/Radio /
Time	Sleep / Timer
Up	Up
Left	Left
Enter	OK
Right	Right
Down	Down
Title	Sound / Title
Menu	Menu / Home
Default	AV / Input / RDS
<<	<< / Tune-
Play / Pause	Play / Slow
Play / Pause	Pause / Step / Freeze





























































 







Original	Sustituto
	 I<< / Preset-
	 >> / Tune+
	 Stop / Hold
	 >>  / Preset+
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Zoom / Size
	 D.Menu / Top
	 Shift + Pause / Step /
	 Shift + Play /
	 Vol+
	 Smart / List
	 Picture / Format
	 Back / Return
	 Vol-

Original	Sustituto




























Original	Sustituto	Original	Sustituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+

Original	Sustituto	Original	Sustituto
On/Off	 Power	Progr.	 TV/Radio /
Audio Off	 Mute / Dimmer	Top Menu	 D.Menu / Top
Play	 Play / Slow	Setup	 Setup / OPT /
Pause	 Pause / Step / Freeze	C/CH	 Text / Goto
Stop	 Stop / Hold	DVD/TV	 AV / Input / RDS
Record	 Rec / Rec Mode	Menu	 Menu / Home
Rewind	 << / Tune-	Menu Up	 Up
F.Forward	 >> / Tune+	Angle	 Info / Angle
Prev.	 I<< / Preset-	Menu Left	 Left
Next	 >>I / Preset+	OK Enter	 OK
Title	 Sound / Title	Menu Right	 Right
Audio	 Audio / Lang I/II	Pbc	 Exit / Cancel / Clear
Subt.	 Subtitle / EQ	Menu Down	 Down
Open/Close	 Eject / Surround	Return	 Back / Return
Auto/Track	 Picture / Format	Volume+	 Vol+
Zoom	 Zoom / Size	Resume	 Smart / List
Np	 Sleep / Timer	Slow Up	 CH+ / Page+



























Original	Sustituto	
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
R/L		Fav / Marker / PC
Search		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

Original	Sustituto	
Rep/A-B		Yellow / YouTube / Repeat
Shuffle		Blue / Prime Video / Random
Karaoke/Step		Shift + Pause / Step /
Echo+		Shift + Up
Echo-		Shift + Down
3D		Shift + 3
Video		Shift + 4



















 




Original	Sustituto	
On/Off		Power
Audio Off		Mute / Dimmer
Play		Play / Slow
Pause		Pause / Step / Freeze
Stop		Stop / Hold
Record		Rec / Rec Mode
Rewind		<< / Tune-
F.Forward		>> / Tune+
Prev.		I<< / Preset-
Next		>>I / Preset+
Title		Sound / Title
Lang		Audio / Lang I/II
Subt.		Subtitle / EQ
Open/Close		Eject / Surround
Auto/Track		Picture / Format
Zoom		Zoom / Size
Pbc		Sleep / Timer

Original	Sustituto	
Progr.		TV/Radio /
Top Menu		D.Menu / Top
Setup		Setup / OPT /
Resume		Text / Goto
DVD/TV		AV / Input / RDS
Menu		Menu / Home
Menu Up		Up
Angle		Info / Angle
Menu Left		Left
OK Enter		OK
Menu Right		Right
Clear/00:00		Exit / Cancel / Clear
Menu Down		Down
Return		Back / Return
Volume+		Vol+
Mode		Smart / List
Slow Up		CH+ / Page+





Original	Sustituto	
Volume-		Vol-
Display		Display / Media
Slow Down		CH- / Page-
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
+10		Guide / EPG / -/--
0		0
C/CH		Fav / Marker / PC
Np		Red / Netflix / Search
Repeat/1/All		Green / APP / Repeat

Original	Sustituto	
Rep/A-B		Yellow / YouTube / Repeat
R/L		Blue / Prime Video / Random

