
 





 



 

 

 

 

 





Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Menu		Menu / Home
	0		0
	Exit		Exit / Cancel / Clear
	Up / CH+		Up
	Up / CH+		CH+ / Page+
	Left / Vol-		Vol-
	Left / Vol-		Left
	OK		OK
	Right / Vol+		Right
	Right / Vol+		Vol+
	Down / CH-		CH- / Page-
	Down / CH-		Down
	Page+		Smart / List
	Page+		Shift + CH+ /
	Page+		>> / Preset+
	Page-		Display / Media
	Page-		Shift + CH- /
	Page-		I<< / Preset-
	Fav		Fav / Marker / PC
	Guide		Guide / EPG / -/-
	i		Info / Angle
	TV/Radio		TV/Radio /
	Last		Back / Return





	Original	Sustituto	Original	Sustituto
	Audio	 Audio / Lang I/II		
	Pause	 Pause / Step / Freeze		
	NTSC/PAL	 Picture / Format		
	NTSC/PAL	 Setup / OPT /		
	Sat	 Shift + 0		
	Red / F1	 Red / Netflix / Search		
	Green / F2	 Green / APP / Repeat		
	Yellow / F3	 Yellow / YouTube / Repeat		
	Blue / F4	 Blue / Prime Video / Random		

