



| Original | Sustituto |
|--------------|-----------|
| Standby | Power |
| Open / Close | Eject |
| 1 | 1 |
| 2 | 2 |
| 3 | 3 |
| 4 | 4 |
| 5 | 5 |
| 6 | 6 |
| 7 | 7 |
| 8 | 8 |
| 9 | 9 |
| 0 | 0 |
| Goto | Guide |
| Add / Clear | Exit |
| << | << |
| >> | >> |
| Pause | Pause |

| Original | Sustituto |
|----------|-----------|
| Play | Play |
| Stop | Stop |
| I<< | I<< |
| >>I | >>I |
| Up | Up |
| Left | Left |
| Enter | Ok |
| Right | Right |
| Down | Down |
| Setup | Options |
| Navigat | Smart |
| Title | List |
| Menu | Menu |
| Subtitle | Subt |
| Angle | Format |
| Source | AV |
| Rec | Rec |




Original
Sustituto

| | | | |
|-----------|-----------|-----------------|---------------|
| TIMER | Timer | SHIFT + TIMER | Shift + AV |
| EDIT | Edit | APP MEDIA | Media |
| USB | USB | A | Red |
| DVD | DVD | B | Green |
| HDD | HDD | C | Yellow |
| DISC OPER | Disc Oper | E-MANUAL D.MENU | D. Menu |
| SLOW | Slow | SHIFT + PAUSE | Shift + Pause |
| RETURN | Return | RETURN BACK | Back |
| REPEAT | Repeat | REPEAT TEXT | Text |
| ZOOM | Zoom | SHIFT + ZOOM | Shift + Eject |
| CH+ | CH+ | + CH | Ch + |
| CH- | CH- | CH - | Ch - |
| P/N | P/N | SEARCH TV/R | TV/R |
| AUDIO | Audio | SOUND DUAL | Dual |
| VOL+ | Vol+ | + VOL | Vol + |
| L/P | L/P | DISPLAY INFO | Info |
| MUTE | Mute | MUTE | Mute |

Original
Sustituto

| | | | |
|------|------|-------|-------|
| VOL- | Vol- | VOL - | Vol - |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |
| | | | |

