



Original	Sustituto	Original	Sustituto
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		Guide / EPG / -/--
	Recall		Back / Return
	Vol+		Vol+
	Audio/Audio/Lang/MTS		Audio / Lang I/II
	Exit/Exit		Exit / Cancel / Clear
	P+		CH+ / Page+
	Vol-		Vol-
	P-		CH- / Page-
	Up		Up
	Left		Left
	OK		OK
	Right		Right
	LCD Menu		Shift + D.Menu / Top Menu
	Down		Down
	DVB Menu		D.Menu / Top
	Input		AV / Input / RDS
	P.Mode		Picture / Format
	S.Mode		Sound / Title
	Sleep		Sleep / Timer
	Info/Display		Info / Angle
	Zoom/P.Ratio		Zoom / Size
	Tv/Radio		TV/Radio /





Original	Sustituto
FAV	Fav / Marker / PC
TTX	Text / Goto
Pause/Hold/Cancel	Pause / Step / Freeze
Cancel/USB/Card	Shift + Exit / Cancel / Clear
EPG/List	Shift + Guide / EPG / -/-
Stop/Index/Stop	Stop / Hold
Size	Shift + Zoom /
Play/Play	Play / Slow
Reveal/Reveal	Setup / OPT /
Subtitle/Sub.PG	Subtitle / EQ
<</FR	<< / Tune-
Red	Red / Netflix / Search
>>/FF	>> / Tune+
Green	Green / APP / Repeat
I<</Prev	I<< / Preset-
Yellow	Yellow / YouTube / Repeat
>>I/Next	>>I / Preset+

Original	Sustituto
Blue	Blue / Prime Video / Random

