
 

 
 




Original	Sustituto
 Power MD	 Power
 TV	 TV/R
 CD	 Yellow
 DVD	 Blue
 Tuner/Band	 Green
 Tape	 Red
 VCR	 Smart
 MD	 Media
 Vol+	 Vol +
 Vol-	 Vol -
 Muting	 Mute
 Stop MD	 Stop
 Play MD	 Play
 <</<< MD	 <<
 >>/>> MD	 >>
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 Menu	 D. Menu
 Display	 Info
 Top Menu/Disc/Deck	 Menu
 1 MD	 1
 2 MD	 2
 3 MD	 3
 4 MD	 4
 5 MD	 5
 6 MD	 6
 7 MD	 7
 8 MD	 8
 9 MD	 9
 0 MD	 0
 >10/-/- MD	 Guide





Original	Sustituto
Tv/AV	AV
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
Power TV	Shift + Power
Tv Vol Up	Shift + Vol +
Tv Vol Down	Shift + Vol -
1 Tv	Shift + 1
2 Tv	Shift + 2
3 Tv	Shift + 3
4 Tv	Shift + 4
5 Tv	Shift + 5

Original	Sustituto
6 Tv	Shift + 6
7 Tv	Shift + 7
8 Tv	Shift + 8
9 Tv	Shift + 9
0 Tv	Shift + 0
>10/-/- Tv	Shift + Guide





Original	Sustituto
 Power DVD	 Power
 TV	 TV/R
 VCR	 Smart
 Tuner/Band	 Green
 Tape	 Red
 MD	 Media
 CD	 Yellow
 DVD	 Blue
 Play DVD	 Play
 I<</<< DVD	 <<
 Stop DVD	 Stop
 >>/>>I DVD	 >>
 Top Menu/Menu/Disc/Deck	 Menu
 Display	 Info
 Menu	 D. Menu
 Up	 Up
 Down	 Down

Original	Sustituto
 Right	 Right
 Left	 Left
 Enter	 Ok
 Stereo	 Dual
 Surround	 Options
 SFC	 Subt
 Test	 Back
 Delay	 Format
 Level	 3D
 +	 Ch +
 -	 Ch -
 1 DVD	 1
 2 DVD	 2
 3 DVD	 3
 4 DVD	 4
 5 DVD	 5
 6 DVD	 6





Original	Sustituto	Original	Sustituto
	7 DVD		7
	8 DVD		8
	9 DVD		9
	0 DVD		0
	>10/-/-- DVD		Guide
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute

Original	Sustituto











 
 
 
 

 
 


 

 

 

 




 
 
 

 


Original	Sustituto	Original	Sustituto
	Power CD		Power
	TV		TV/R
	VCR		Smart
	CD		Yellow
	DVD		Blue
	Tape		Red
	MD		Media
	Tuner/Band		Green
	Stop CD		Stop
	I<</<< CD		<<
	>>/>>I CD		>>
	Play CD		Play
	Menu		D. Menu
	Display		Info
	Top Menu/Disc/Deck		Menu
	Up		Up
	Down		Down

Original	Sustituto	Original	Sustituto
	Right		Right
	Left		Left
	Enter		Ok
	Stereo		Dual
	Surround		Options
	SFC		Subt
	Test		Back
	Delay		Format
	Level		3D
	+		Ch +
	-		Ch -
	Vol+		Vol +
	Vol-		Vol -
	Muting		Mute
	Power Tape		Shift + Power
	Stop Tape		Shift + Stop
	Play Tape		Shift + Play




 





 





 









 













 





















 










Original	Sustituto	Original	Sustituto
 <</>> Tape	 +  Shift + <<		
 >>/>> Tape	 +  Shift + >>		
 Top Menu/Disc/Deck	 +  Shift + Menu		
 1 CD-Tape	 1		
 2 CD-Tape	 2		
 3 CD-Tape	 3		
 4 CD-Tape	 4		
 5 CD-Tape	 5		
 6 CD-Tape	 6		
 7 CD-Tape	 7		
 8 CD-Tape	 8		
 9 CD-Tape	 9		
 0 CD-Tape	 0		
 >10/!- CD-Tape	 GUIDE		
 Direct Tuning/Disc Enter	 REPEAT TEXT		





Original	Sustituto	Original	Sustituto
 Power VCR	 Power	 6 VCR	 6
 VCR	 Smart	 7 VCR	 7
 Tape	 Red	 8 VCR	 8
 TV	 TV/R	 9 VCR	 9
 CD	 Yellow	 0 VCR	 0
 DVD	 Blue	 >10/-/- VCR	 Guide
 Tuner/Band	 Green	 Direct Tuning/Disc Enter	 Text
 MD	 Media	 Vol+	 Vol +
 Stop	 Stop	 Vol-	 Vol -
 I<</>>I	 <<	 Muting	 Mute
 >>/>>I	 >>	 Up	 Up
 Play	 Play	 Down	 Down
 1 VCR	 1	 Right	 Right
 2 VCR	 2	 Left	 Left
 3 VCR	 3	 Enter	 Ok
 4 VCR	 4	 Top Menu/Disc/Deck	 Menu
 5 VCR	 5	 Display	 Info





Original	Sustituto
Menu	D. Menu
Stereo	Dual
Surround	Options
SFC	Subt
Test	Back
Delay	Format
Level	3D
+	Ch +
-	Ch -
Power Tuner/Band	Shift + Power
1 Tuner/Band	Shift + 1
2 Tuner/Band	Shift + 2
3 Tuner/Band	Shift + 3
4 Tuner/Band	Shift + 4
5 Tuner/Band	Shift + 5
6 Tuner/Band	Shift + 6
7 Tuner/Band	Shift + 7

Original	Sustituto
8 Tuner/Band	Shift + 8
9 Tuner/Band	Shift + 9
0 Tuner/Band	Shift + 0
>10/-/	Shift + Guide

