



 
 
 
 
 

 

 

 
 





 


 

 

 
 

 

 

 
 

 
 
 

 
 
 



 
 
 

 



 
 
 
 

 
 

 

 





Original	Sustituto	Original	Sustituto
 Standby	 Power	 Source / AV	 AV
 TV / Radio	 TV/R	 Info	 Info
 TV Guide	 Guide	 Up	 Up
 Mute	 Mute	 Right	 Right
 ATV	 Shift + Smart	 Down	 Down
 USB	 Media	 Left	 Left
 DVD	 Smart	 OK	 Ok
 Eject	 Eject	 Menu	 Menu
 Rec	 Rec	 Exit	 Exit
 Rec List	 Shift + Rec	 1	 1
 I<<	 I<<	 2	 2
 >>I	 >>I	 3	 3
 Stop	 Stop	 4	 4
 <<	 <<	 5	 5
 >>	 >>	 6	 6
 Play / Pause	 Play	 7	 7
 Play / Pause	 Pause	 8	 8





Original	Sustituto
	9
	0
	Back
	Pre Ch
	Vol +
	Vol -
	Subt
	Format
	Dual
	Sleep
	Ch +
	Ch -
	Red
	Green
	Yellow
	Blue
	Shift + Text

Original	Sustituto
	D.Dis
	Shift + Info
	Shift + Eject
	3D
	Shift + Power
	Text
	Options
	D. Menu
	List
	Shift + Pause

