



Original	Sustituto
	Mute / Dimmer
	Power
	Display / Media
	AV / Input / RDS
	Shift + Pause / Step /
	Exit / Cancel / Clear
	Guide / EPG / -/--
	Text / Goto
	Subtitle / EQ
	Picture / Format
	Setup / OPT /
	Up
	Audio / Lang I/II
	Left
	OK
	Right
	Menu / Home

Original	Sustituto
	Down
	Info / Angle
	CH- / Page-
	CH+ / Page+
	Vol-
	Vol+
	Red / Netflix / Search
	Shift + CH+ /
	Smart / List
	Green / APP / Repeat
	Shift + CH- /
	Sound / Title
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	1
	2
	3





	Original	Sustituto		Original	Sustituto
	4		4		
	5		5		
	6		6		
	7		7		
	8		8		
	9		9		
	Fav.		Fav / Marker / PC		
	0		0		
	P<P		Back / Return		
	<<		<< / Tune-		
	>>		>> / Tune+		
	Timers		Sleep / Timer		
	Lib.		D.Menu / Top		
	Play		Play / Slow		
	Stop		Stop / Hold		
	Pause		Pause / Step / Freeze		
	Rec		Rec / Rec Mode		

