




Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Audio
	0
	Recall
	Aspect
	Sound
	APP

Original	Sustituto
	Vol+
	Home
	Home
	CH+
	Vol-
	EPG
	CH-
	Picture
	TV
	TV
	USB
	Menu
	Up
	Source
	Left
	OK
	Right

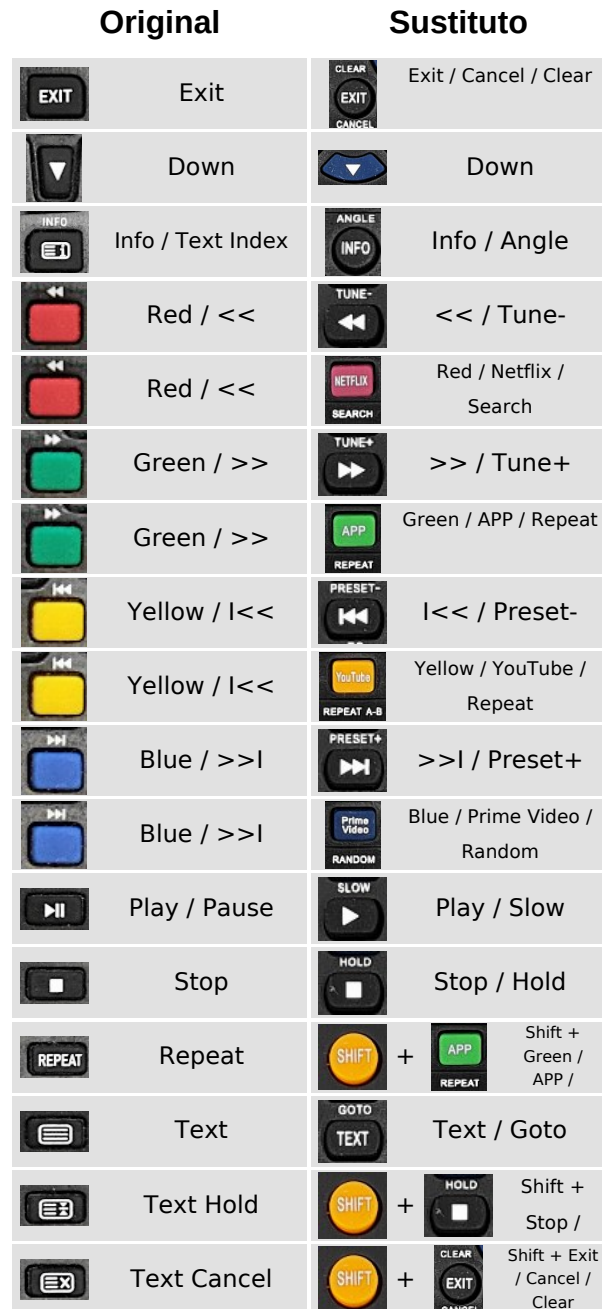

[illegible]



Original	Sustituto
	Power
	Mute
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Audio
	0
	Recall
	Aspect
	Aspect
	Sound
	Power
	Mute / Dimmer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Audio / Lang I/II
	0
	Back / Return
	Setup / OPT /
	Shift + Picture / Format
	Sound / Title

Original	Sustituto
	APP
	Vol+
	Home
	Home
	CH+ / Page+
	Vol-
	EPG
	CH- / Page-
	Picture
	TV
	TV
	USB
	Menu
	Up
	Source
	Left
	OK
	Display / Media
	Vol+
	Shift + Menu /
	D.Menu / Top
	CH+ / Page+
	Vol-
	Guide / EPG / -/-
	CH- / Page-
	Picture / Format
	TV/Radio /
	Shift + 1
	Shift + 8
	Menu / Home
	Up
	AV / Input / RDS
	Left
	OK





POWER **DIMMER MUTE** **SHIFT**
TV SLOW **DVD** STEP-FREEZE **SAT** HOLD **AUX** REC MODE
PLAY **PAUSE** **STOP** **RECORD**
TUNE- **TUNE+** **PRESET-** **PRESET+**
LEFT **RIGHT** **LEFT** **RIGHT**
TITLE **LANG I/II** **EQ** **SURROUND**
SOUND **AUDIO** **SUBTITLE** **▲**
FORMAT **SIZE** **TIMER** **PROGRAM**
PICTURE **ZOOM** **SLEEP** **TV RADIO**
TOP MENU **OPT-TOOLS** **GOTO** **RDS**
D.MENU **SETUP** **TEXT** **AV INPUT**
HOME **ANGLE**
MENU **INFO**
OK
LEFT **RIGHT**
UP **DOWN**
CLEAR **RETURN**
EXIT **BACK**
CANCEL
+ **LIST** **+**
VOL- **SMART** **CH PAGE**
— **MEDIA** **—**
DISPLAY
TV **DVD** **CD-STR**
1 **2** **3**
VIDEO **TAPE** **TUNER**
4 **5** **6**
AUX-HDD **USB** **BLUETOOTH**
7 **8** **9**
←→ **HDMI-SAT** **PC**
GUIDE **0** **FAV MARKER**
EPG
NETFLIX **APP** **YouTube** **Prime Video**
SEARCH **REPEAT** **REPEAT A-B** **RANDOM**
Mandis
shop
www.mandis.tv



Original	Sustituto	
Power		Power
Mute		Mute / Dimmer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
List		Smart / List
0		0
Recall		Back / Return
Picture		Picture / Format
Sound		Sound / Title
Sleep		Sleep / Timer

Original	Sustituto	
Vol +		Vol+
Audio		Audio / Lang I/II
CH +		CH+ / Page+
Vol -		Vol-
Aspect		Shift + Picture / Format
CH -		CH- / Page-
EPG / Set		Guide / EPG / -/--
Home		Shift + Menu /
APP		Shift + Green / APP /
Menu		Menu / Home
Up		Up
Source		AV / Input / RDS
Left		Left
Enter		OK
Right		Right
Exit		Exit / Cancel / Clear
Down		Down





Original	Sustituto	
Info		Info / Angle
Red		Red / Netflix / Search
Green		Green / APP / Repeat
Yellow		Yellow / YouTube / Repeat
Blue		Blue / Prime Video / Random
<< / Index		<< / Tune-
Play/Pause /		Play / Slow
>> / TTX		Text / Goto
>> / TTX		>> / Tune+
I<< / Sub.Pg		I<< / Preset-
>>I / Reveal		>>I / Preset+
Stop / Mix		Stop / Hold
Capture		Display / Media
Subtitle		Subtitle / EQ
Freeze		Pause / Step / Freeze
FAV		Fav / Marker / PC
Size / Mouse		Zoom / Size

[illegible]