


Original		Sustituto		Original		Sustituto	
	Standby		Power		Title / TTX		Text / Goto
	Mute		Mute / Dimmer		Source		AV / Input / RDS
	Play		Play / Slow		Menu / PBC		Menu / Home
	Pause		Pause / Step / Freeze		Up		Up
	Stop		Stop / Hold		Left / Fav-		Left
	Rec		Rec / Rec Mode		Enter		OK
	<<		<< / Tune-		Right / Fav+		Right
	>>		>> / Tune+		Clear		Exit / Cancel / Clear
	I<<		I<< / Preset-		Down		Down
	>>I		>>I / Preset+		Return		Back / Return
	Language		Audio / Lang I/II		Vol+		Vol+
	SUBT / RIP		Subtitle / EQ		L/R		Smart / List
	Open / Close		Eject / Surround		Vol-		Vol-
	Zoom		Zoom / Size		OSD		Display / Media
	Time		Sleep / Timer		1		1
	TV / Radio		TV/Radio /		2		2
	Setup		Setup / OPT /		3		3

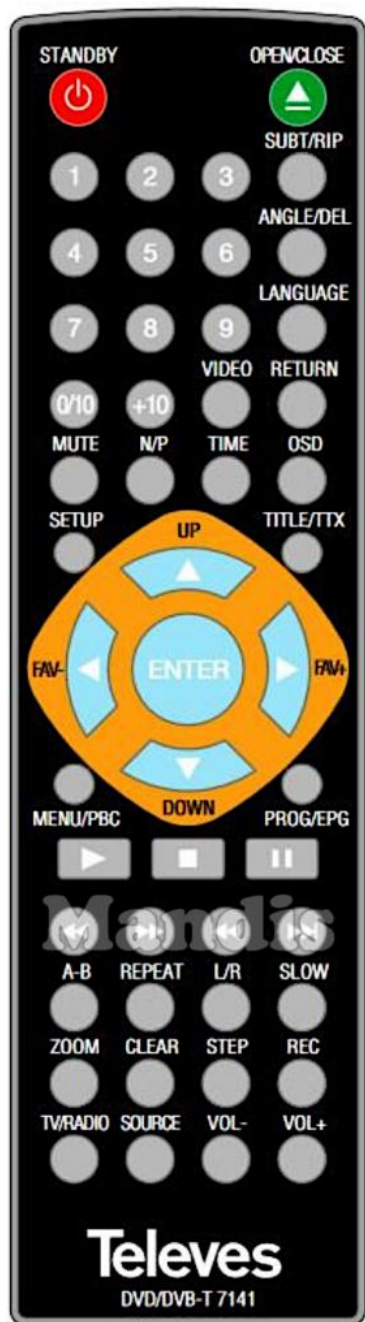



Original	Sustituto
[4]	[VIDEO 4]
[5]	[TAPE 5]
[6]	[TUNER 6]
[7]	[AUX - HDD 7]
[8]	[USB 8]
[9]	[BLUETOOTH 9]
[+10]	[GUIDE EPG] Guide / EPG / -/--
[+10]	[HDMI - BAT 0] 0
[REPEAT]	[APP REPEAT] Green / APP / Repeat
[A-B]	[YouTube REPEAT A-B] Yellow / YouTube / Repeat
[SLOW]	[SHIFT + SLOW] Shift + Play /
[STEP]	[SHIFT + STEP - FREEZE] Shift + Pause / Step /
[PROG/EPG]	[SHIFT + PROGRAM TV/RADIO] Shift + TV/Radio / Program
[ANGLE/DEL]	[SHIFT + RETURN BACK] Shift + Back / Return
[N/P]	[SHIFT + MEDIA DISPLAY] Shift + Display / Media
[VIDEO]	[SHIFT + VIDEO 4] Shift + 4
[PROG/EPG]	[SHIFT + GUIDE EPG] Shift + Guide / EPG / -/--

Original	Sustituto

