


















Original		Sustituto		Original		Sustituto	
	Power		Power		OK		OK
	Mute		Mute / Dimmer		Right		Right
	Play		Play / Slow		Exit		Exit / Cancel / Clear
	Pause		Pause / Step / Freeze		Down		Down
	Stop		Stop / Hold		PRE-CH		Back / Return
	<<		<< / Tune-		Vol+		Vol+
	>>		>> / Tune+		List		Smart / List
	O)/Lang		Audio / Lang I/II		P+		CH+ / Page+
	Subt.		Subtitle / EQ		Vol-		Vol-
	Zoom		Zoom / Size		P-		CH- / Page-
	*		Setup / OPT /		1		1
	Text		Text / Goto		2		2
	Source		AV / Input / RDS		3		3
	Home		Menu / Home		4		4
	Up		Up		5		5
	[i]		Info / Angle		6		6
	Left		Left		7		7





Original	Sustituto	Original	Sustituto
	8		8
	9		9
	Guide		Guide / EPG / -/--
	0		0
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	≡		Shift + Text /
	←		Shift + Left
	Netflix		Shift + Red / Netflix /

Original	Sustituto

