


 


 

 
 

 
 

 
 
 

 
 
 




 








 


 
 
 

 
 






Original	Sustituto
 Power	 Power
 FAV	 Pre Ch
 TV/R	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PG+	 Shift + Ch +
 PG-	 Shift + Ch -
 Back	 Back
 i	 Info

Original	Sustituto
 Menu	 Menu
 Exit/Sortie	 Exit
 Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 SUB	 Subt
 TXT	 Text
 Audio	 Dual
 List	 List






 
 
 



 
 



 
 
 

 
 






 
 



 






	Original	Sustituto	Original	Sustituto
	OPT	 Options		
	[+]	 3D		
	<	 I<<		
	<<	 <<		
	>>	 >>		
	>	 >>		
	Rec	 Rec		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		





Original	Sustituto
 Power	 Power
 FAV	 Pre Ch
 TV/R	 TV/R
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 PG+	 +  Shift + Ch +
 PG-	 +  Shift + Ch -
 Back	 Back
 i	 Info

Original	Sustituto
 Menu	 Menu
 Exit/Sortie	 Exit
 Guide	 Guide
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 P+	 Ch +
 P-	 Ch -
 SUB	 Subt
 TXT	 Text
 Audio	 Dual
 List	 List





	Original	Sustituto	Original	Sustituto
	OPT	 Options		
	[+]	 3D		
	<	 I<<		
	<<	 <<		
	>>	 >>		
	>	 >>		
	Rec	 Rec		
	Play	 Play		
	Pause	 Pause		
	Stop	 Stop		
	Red	 Red		
	Green	 Green		
	Yellow	 Yellow		
	Blue	 Blue		

