











 
 
 
 

 







 





 



 

 
 
 

 

 
 
 
 
 
 

 
 
 

 
 


 
 



 








Original	Sustituto	Original	Sustituto
	Power		Power
	Sleep		Sleep
	Open / Close		Eject
	Mute		Mute
	PScan		Options
	Next		AV
	DVD		Smart
	Tuner		Media
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Mode		D. Menu
	Tone		Dual
	Title / Rotate		List
	Menu		Menu
	Info		Info
	Exit		Exit
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	Up		Up
	Left		Left
	OK		Ok
	Right		Right
	Down		Down
	Vol+		Vol +





Original		Sustituto		Original		Sustituto	
	Vol-		Vol -				
	Stop / FM Mode		Stop				
	Play		Play				
	Pause		Pause				
	Zoom / Clear		Shift + Exit				
	Zoom / Clear		Shift + Eject				

