





 























Original	Sustituto
 Power	 Power
 Vol+	 Vol+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Return	 Back / Return
 PR+	 CH+ / Page+
 >>	 >> / Preset+
 <<	 << / Preset-
 PR-	 CH- / Page-
 Exit	 Exit / Cancel / Clear
 Menu	 Menu / Home
 Up	 Up
 Down	 Down
 Right/Zoom+	 Right
 Left/Zoom-	 Left
 OK	 OK
 Red	 Red / Netflix / Search

Original	Sustituto
 Sound	 Sound / Title
 Green	 Green / APP / Repeat
 List	 Shift +  Smart / List
 Yellow	 Yellow / YouTube / Repeat
 Info	 Info / Angle
 Mosaic	 Smart / List
 Blue	 Blue / Prime Video / Random
 Violet	 Display / Media
 Text	 Text / Goto
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8






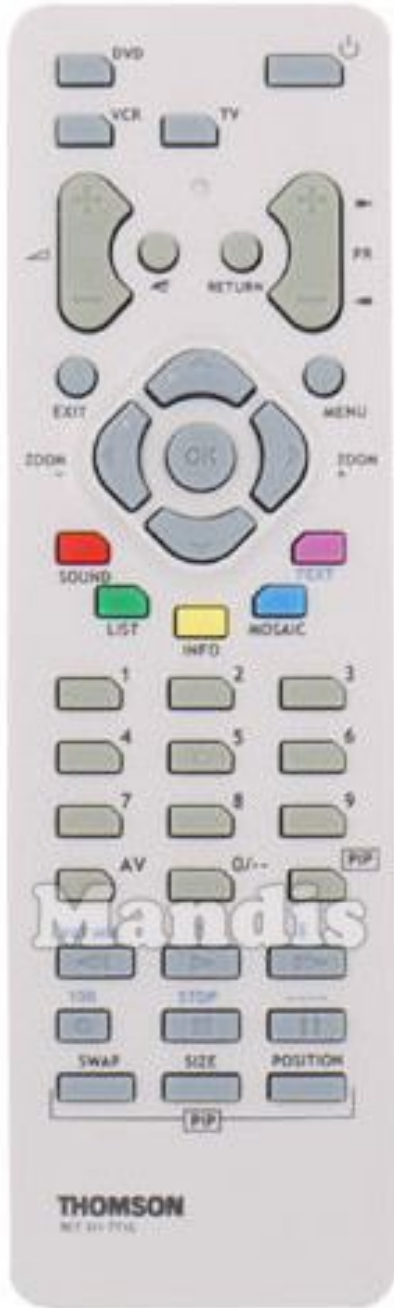


Original	Sustituto
9	9
0/--	0
AV	AV / Input / RDS
PIP	Zoom / Size
<</Pat-Mix	<< / Tune-
Play/?	Play / Slow
>>	>> / Tune+
Rec/100	Rec / Rec Mode
Stop	Stop / Hold
Pause/----	Pause / Step / Freeze
Swap PIP	Setup / OPT /
Size PIP	Picture / Format
Position PIP	TV/Radio /

Original	Sustituto

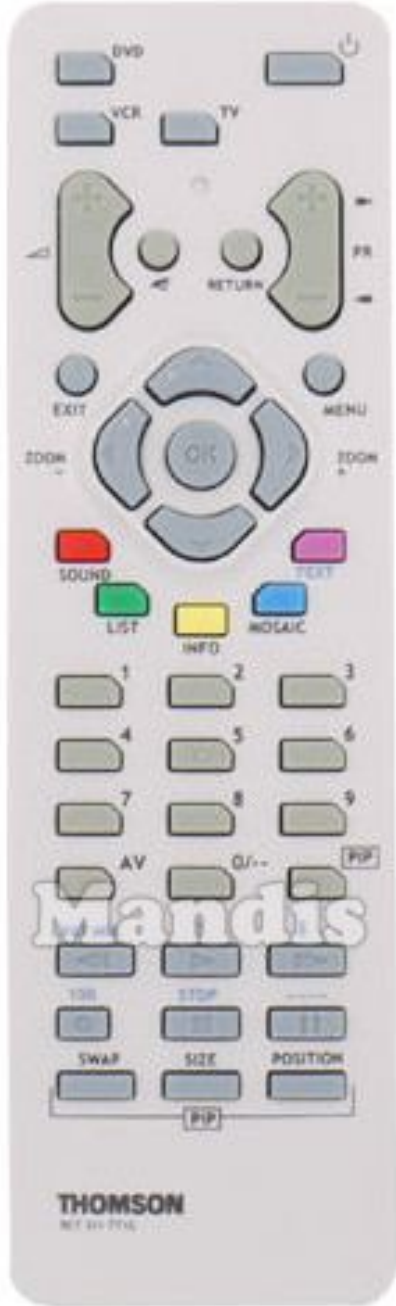




Original	Sustituto
	 Power
	 Vol+
	 Vol-
	 Mute / Dimmer
	 Back / Return
	 CH+ / Page+
	 >> / Preset+
	 CH- / Page-
	 << / Preset-
	 Exit / Cancel / Clear
	 Menu / Home
	 Up
	 Down
	 Right
	 Left
	 OK
	 Red / Netflix / Search

Original	Sustituto
	 Sound / Title
	 Green / APP / Repeat
	 Shift + Smart / List
	 Info / Angle
	 Yellow / YouTube / Repeat
	 Smart / List
	 Blue / Prime Video / Random
	 Display / Media
	 Text / Goto
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8




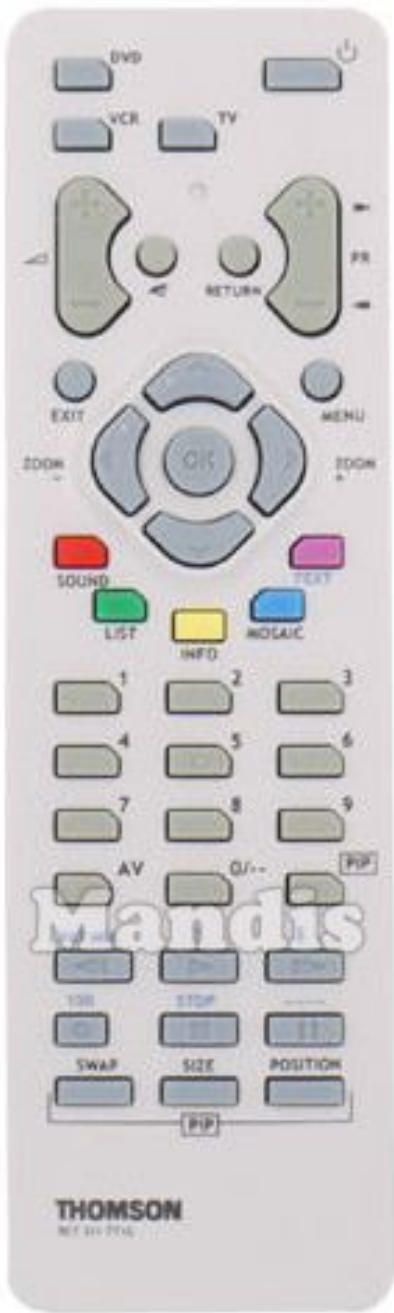

Original	Sustituto
 9	 9
 0/-/--	 0
 AV	 AV / Input / RDS
 PIP	 Zoom / Size
 <</Pat-Mix	 << / Tune-
 Play/?	 Play / Slow
 >>	 >> / Tune+
 Rec/100	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/----	 Pause / Step / Freeze
 Swap PIP	 Setup / OPT /
 Size PIP	 Picture / Format
 Position PIP	 TV/Radio /

Original	Sustituto




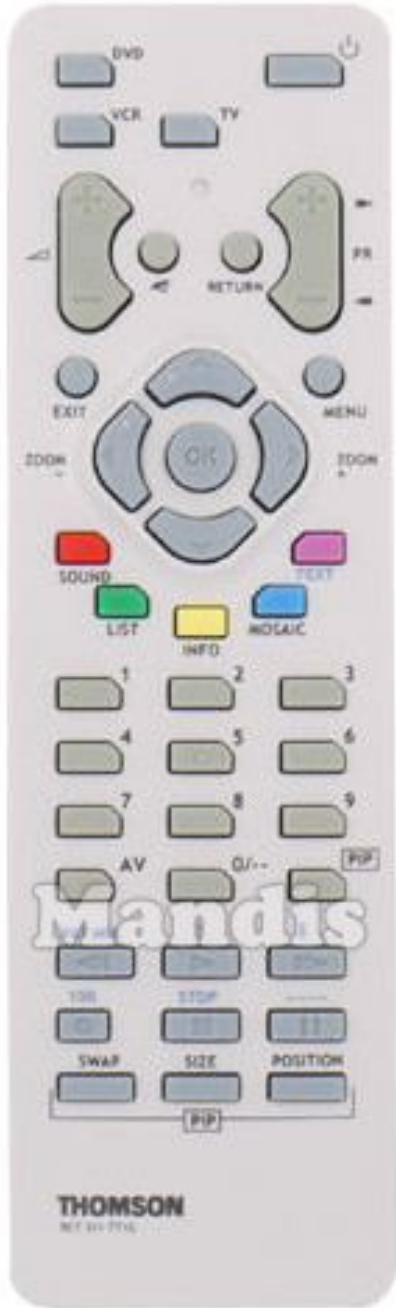

Original	Sustituto
Power	Power
Vol+	Vol+
Vol-	Vol-
Mute	Mute / Dimmer
Return	Back / Return
PR+	CH+ / Page+
>>	>> / Preset+
<<	<< / Preset-
PR-	CH- / Page-
Exit	Exit / Cancel / Clear
Menu	Menu / Home
Up	Up
Down	Down
Right/Zoom+	Right
Left/Zoom-	Left
OK	OK
Red	Red / Netflix / Search

Original	Sustituto
Sound	Sound / Title
List	Shift + Smart / List
Green	Green / APP / Repeat
Info	Info / Angle
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Mosaic	Smart / List
Violet	Display / Media
Text	Text / Goto
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8



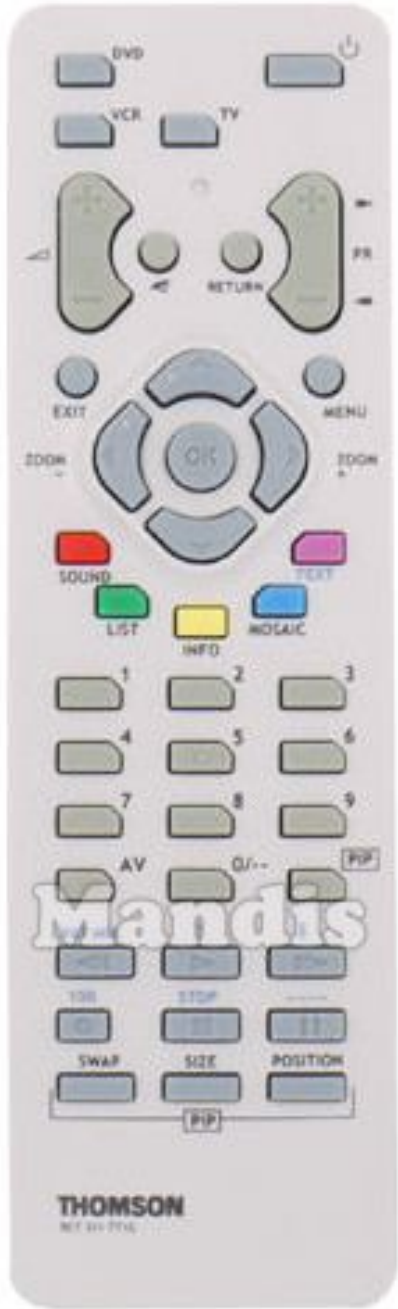

Original	Sustituto
 9	 9
 0/-/-	 0
 AV	 AV / Input / RDS
 PIP	 Zoom / Size
 <</Pat-Mix	 << / Tune-
 Play/?	 Play / Slow
 >>	 >> / Tune+
 Rec/100	 Rec / Rec Mode
 Stop	 Stop / Hold
 Pause/----	 Pause / Step / Freeze
 Size PIP	 Picture / Format
 Position PIP	 TV/Radio /

Original	Sustituto

