




Original	Sustituto
Standby	Power
Info	Info / Angle
Mute	Mute / Dimmer
P.Mode	Picture / Format
S.Mode	Sound / Title
Zoom	Zoom / Size
Sleep	Sleep / Timer
1	1
2	2
3	3
Freeze	Pause / Step / Freeze
4	4
5	5
6	6
DTV/Radio	TV/Radio /
7	7
8	8

Original	Sustituto
9	9
FAV / Slow	Shift + Play /
FAV / Slow	Fav / Marker / PC
Source	AV / Input / RDS
0	0
Exit	Exit / Cancel / Clear
CH.List / Step	Smart / List
CH.List / Step	Shift + Pause / Step /
Up	Up
Left	Left
OK	OK
Right	Right
Down	Down
Vol+	Vol+
Vol-	Vol-
Prog-	CH- / Page-
Prog+	CH+ / Page+





Original	Sustituto
 LCD MENU	 Menu / Home
 EPG / DVD	 Guide / EPG / -/--
 EPG / DVD	 D.Menu / Top
 Audio Language	 Audio / Lang I/II
 Recall / DVD	 Back / Return
 Recall / DVD	 Setup / OPT /
 TXT / Title	 Text / Goto
 TXT / Title	 Shift + Sound / Title
 Index / Angle	 Shift + Info / Angle
 Size / Goto	 Shift + Text /
 Size / Goto	 Shift + Zoom /
 Subtitle	 Subtitle / EQ
 Mix / Open/Close	 Eject / Surround
 Reveal /	 Play / Slow
 Hold / Stop	 Stop / Hold
 Subpage / A-B	 Shift + Yellow / YouTube /
 Red/ <<	 Red / Netflix / Search

Original	Sustituto
 Red/ <<	 << / Tune-
 Green/ >>	 Green / APP / Repeat
 Green/ >>	 >> / Tune+
 Yellow/ <<	 Yellow / YouTube / Repeat
 Yellow/ <<	 <<< / Preset-
 Blue/ >>	 Blue / Prime Video / Random
 Blue/ >>	 >> / Preset+
 Prog	 Shift + TV/Radio / Program
 Repeat	 Shift + Green / APP /
 Display	 Display / Media
 USB/Disc	 Shift + 8

