



Original	Sustituto	Original	Sustituto
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Source		AV
	ATV/DTV/Content Menu		Smart
	Vol+		Vol +
	Vol-		Vol -
	P+		Ch +
	P-		Ch -

Original	Sustituto	Original	Sustituto
	Mute		Mute
	Guide/Top		Media
	Exit/Return		Exit
	Up		Up
	Down		Down
	Right		Right
	Left		Left
	OK		Ok
	Menu/DVD		Menu
	Tv/FAV/Radio/Set		TV/R
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	[<>]		Format
	<[/]>		3D
	Subtitle		Subt


 




 
 


 


 

 


 
 

 
 

 

 
 

 

 

 



 

 
 
 

 
 
















	Original	Sustituto		Original	Sustituto
	Text	 Text			
	II/II>/[▼]	 Pause			
	[i+]/[≡i]	 Info			
	O)I/II	 Dual			
	Stop	 Stop			
	Play/[≡o]	 Play			
	Eject	 Eject			
	I<</[≡?]	 I<<			
	<</[≡+]	 <<			
	>>/[≡◇]	 >>			
	>>I/[O]/[≡X]	 >>I			
	AD	 Shift + Subt			
	Audio	 Shift + Dual			





Original	Sustituto	Original	Sustituto
	←[/]→		Menu/DVD
	Power		Menu
	1		Tv/FAV/Radio/Set
	2		TV/R
	3		Guide/Top
	4		Guide
	5		[<>]
	6		Format
	7		Text
	8		Text
	9		Subtitle
	0		Subt
	Source		Dual
	Mute		Info
	Vol+		Ok
	Vol-		Up
	Exit/Return		Down
	3D		Right
	Power		Left
	1		Pause
	2		Play/[≡o]
	3		Stop
	4		Eject
	5		
	6		
	7		
	8		
	9		
	0		
	Source		
	Mute		
	Vol +		
	Vol -		
	Exit		

 

 

 
 
 
 

 
 
 
 
 
 

 

 
 
 
 


 


 








 
 
 
 


Original	Sustituto	Original	Sustituto
 <</[≡?]	 <<		
 <</[≡+]	 <<		
 >>/[≡◆]	 >>		
 >> /[O]/[≡X]	 >>		
AUDIO TEXT	 +  Shift + Dual		





Original	Sustituto
 Power	 Power
 ←[/]→	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 ATV/DTV/Content Menu	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +

Original	Sustituto
 P-	 Ch -
 Mute	 Mute
 Guide/Top	 Guide
 Exit/Return	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu/DVD	 Menu
 Tv/FAV/Radio/Set	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 [<>]	 Format





Original	Sustituto	Original	Sustituto
	[i+]/[≡i]		Info
	II/II>/[▼]		Pause
	Subtitle		Subt
	O)/II		Dual
	Play/[≡o]		Play
	Stop		Stop
	Eject		Eject
	I<</[≡?]		I<<
	<</[≡+]		<<
	>>/[≡◇]		>>
	>>I/[O]/[≡X]		>>I
	Audio	+	Shift + Dual
	AD	+	Shift + Subt

