



Original	Sustituto
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 ATV/DTV/Content Menu	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +
 P-	 Ch -

Original	Sustituto
 Mute	 Mute
 Guide/Top	 Media
 Exit/Return	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu/DVD	 Menu
 Tv/FAV/Radio/Set	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 [<>]	 Format
 ←[/]→	 3D
 Subtitle	 Subt


 




 
 


 


 

 


 
 

 
 

 

 
 

 

 

 



 

 
 
 

 
 
















	Original	Sustituto	Original	Sustituto
	Text	 Text		
	II/II>/[▼]	 Pause		
	[i+]/[≡i]	 Info		
	O)I/II	 Dual		
	Stop	 Stop		
	Play/[≡o]	 Play		
	Eject	 Eject		
	I<</[≡?]	 I<<		
	<</[≡+]	 <<		
	>>/[≡◇]	 >>		
	>>I/[O]/[≡X]	 >>I		
	AD	 +  Shift + Subt		
	Audio	 +  Shift + Dual		





Original	Sustituto	Original	Sustituto
	←[/]→		Menu/DVD
	Power		Menu
	1		Tv/FAV/Radio/Set
	2		TV/R
	3		Guide/Top
	4		Guide
	5		[<>]
	6		Format
	7		Text
	8		Text
	9		Subtitle
	0		Subt
	Source		Dual
	Mute		Info
	Vol+		Ok
	Vol-		Up
	Exit/Return		Down
	3D		Right
	Power		Left
	1		Pause
	2		Play
	3		Stop
	4		Eject
	5		
	6		
	7		
	8		
	9		
	0		
	Source		
	Mute		
	Vol +		
	Vol -		
	Exit		

 

 

 
 
 
 

 
 
 
 
 
 

 

 
 
 
 


 


 








 
 
 
 


Original	Sustituto	Original	Sustituto
 <</[≡?]	 <<		
 <</[≡+]	 <<		
 >>/[≡◇]	 >>		
 >> /[O]/[≡X]	 >>		
AUDIO TEXT	 +  Shift + Dual		





Original	Sustituto
 Power	 Power
 ←[/]→	 3D
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Source	 AV
 ATV/DTV/Content Menu	 Smart
 Vol+	 Vol +
 Vol-	 Vol -
 P+	 Ch +

Original	Sustituto
 P-	 Ch -
 Mute	 Mute
 Guide/Top	 Guide
 Exit/Return	 Exit
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 Menu/DVD	 Menu
 Tv/FAV/Radio/Set	 TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue
 Text	 Text
 [<>]	 Format





Original	Sustituto	Original	Sustituto
	[i+]/[≡i]		Info
	II/II>/[▼]		Pause
	Subtitle		Subt
	O)I/II		Dual
	Play/[≡o]		Play
	Stop		Stop
	Eject		Eject
	I<</[≡?]		I<<
	<</[≡+]		<<
	>>/[≡♦]		>>
	>>I/[O]/[≡X]		>>I
	Audio	+	Shift + Dual
	AD	+	Shift + Subt

