


 
 
 


 

 






 





Original	Sustituto
 Open/Close	 Eject / Surround
 Power	 Power
 Tv/VCR	 AV / Input / RDS
 VCR	 Shift + 4
 DVD	 Shift + 2
 Clock Counter	 Info / Angle
 Program	 TV/Radio /
 One Touch	 Green / APP / Repeat
 Instant Skip	 Text / Goto
 Setup/VCR	 Setup / OPT /
 Zoom	 Zoom / Size
 l> Slow	 Blue / Prime Video / Random
 Top Menu	 D.Menu / Top
 Up	 Up
 CH+	 CH+ / Page+
 DVD Menu	 Menu / Home
 Left/Set-	 Left

Original	Sustituto
 Enter	 OK
 Right/Set+	 Right
 Clear/Cancel	 Exit / Cancel / Clear
 CH-	 CH- / Page-
 Down	 Down
 Return	 Back / Return
 Stop	 Stop / Hold
 Pause/Step	 Pause / Step / Freeze
 Play	 Play / Slow
 I<< Skip/Index-	 I<< / Preset-
 <<	 << / Tune-
 >>	 >> / Tune+
 Skip	 I>> / Preset+
 Rec/OTR	 Rec / Rec Mode
 Timer Rec	 Sleep / Timer
 Play	 Red / Netflix / Search
 A-B RPT	 Yellow / YouTube / Repeat





	Original	Sustituto	Original	Sustituto
1	1	TV		
2	2	DVD		
3	3	CD - STB		
	Display/Call	MEDIA DISPLAY		Display / Media
4	4	VIDEO		
5	5	TAPE		
6	6	TUNER		
	Jump/Zero Return	GUIDE EPG		Guide / EPG / /--
7	7	AUX - HDD		
8	8	USB		
9	9	BLUETOOTH		
	0/AUX	HDMI - BAT		
	Camera/Angle/Counter Reset	FORMAT PICTURE		Picture / Format
	[...]/Subtitle/ATR	EQ SUBTITLE		Subtitle / EQ
	0)/Audio/Audio Select	LANG I/II AUDIO		Audio / Lang I/II
	Marker	PC FAV MARKER		Fav / Marker / PC

