 



 















 







 

 







Original	Sustituto
 Input	 AV / Input / RDS
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Lang	 Audio / Lang I/II
 0	 0
 TXT	 Text / Goto
 Vol+	 Vol+
 Home	 Menu / Home

Original	Sustituto
 P+	 CH+ / Page+
 Vol-	 Vol-
 P-	 CH- / Page-
 [i+]	 Info / Angle
 Up	 Up
 Guide	 Guide / EPG / -/--
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Prime Video	 Shift + Blue / Prime Video / Random





	Original	Sustituto	
	Netflix	+	Shift + Red / Netflix /
	You Tube	+	Shift + Yellow / YouTube /
	twitch		Smart / List
	Rakuten Tv	+	Shift + Green / APP /
	*1		Setup / OPT /
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Rec		Rec / Rec Mode
	Play		Play / Slow
	Stop		Stop / Hold

	Original	Sustituto

